

14 ARCADE Ave
Model no - : HNC 6200 W



S/N - : 34001395

MAINTENANCE AND USER'S GUIDE



EN

Congratulations on purchasing this fridge, which has been designed using the latest technologies for an easy-to-use, environmentally friendly appliance. We recommend you read this guide and the technical datasheet carefully to find out everything you need to know about your new fridge.

A

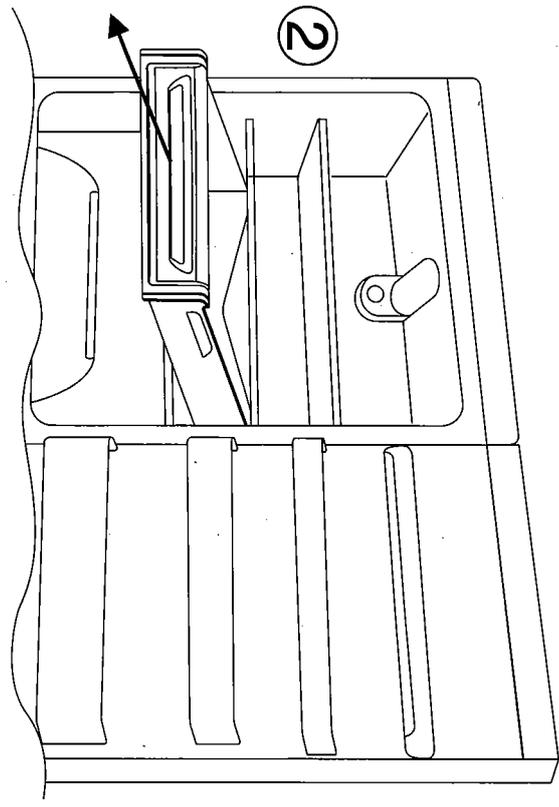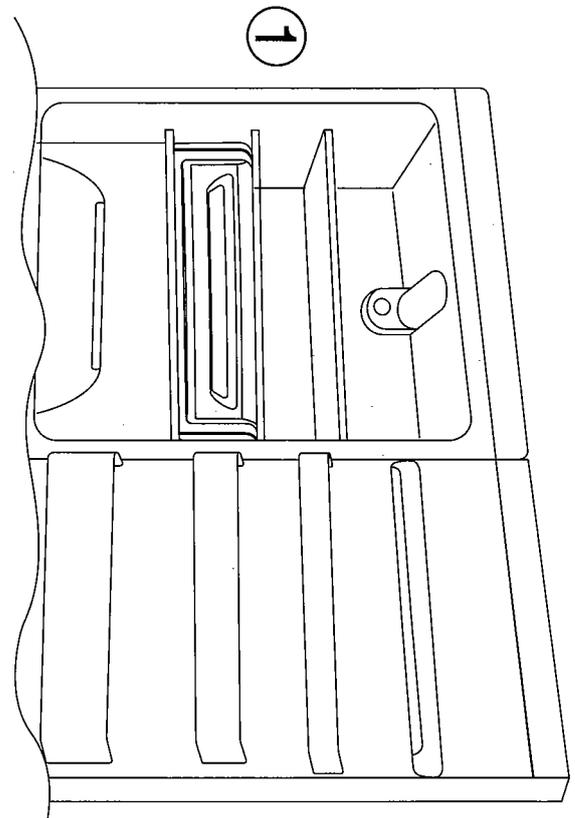


B

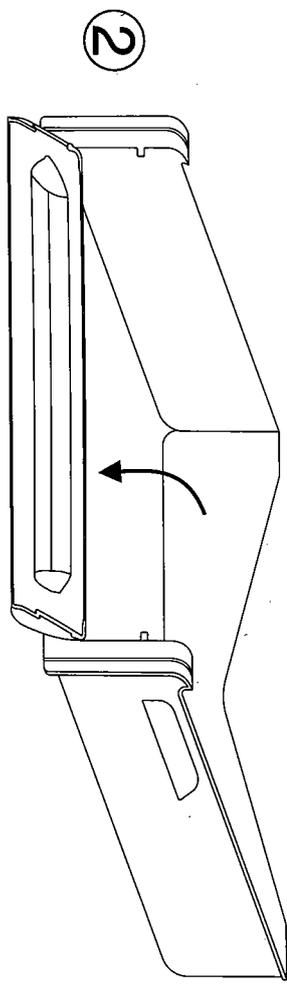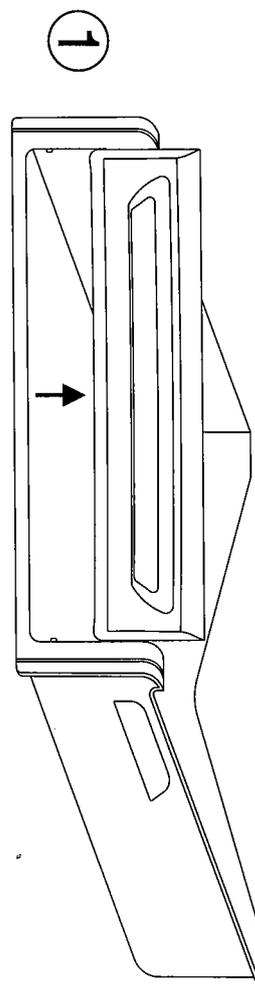

COMBINED AND FROST FREE COMBINED

CONTROL PANEL

(figure 1)

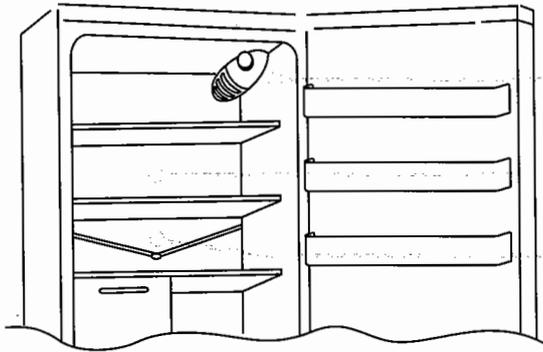

The thermostat box to control the appliance is located inside the fridge compartment on the top right. To check whether the appliance is functioning, make sure that the thermostat knob is not set on "0". Adjust the knob according to the desired temperature in the fridge.

In this product the freezer compartment is automatically defrosted. A small amount of frost or drops of water on the back of the fridge compartment when the fridge is working is normal.

Make sure the water outlet is always clean. Make sure foods do not touch the back or sides of the fridge compartment


Important: If the room temperature is very warm, the appliance may work continuously and a layer of frost will deposit on the back of the fridge compartment. In this case, turn the knob to lower settings.

FREEZING OF THE FREEZER COMPARTMENT

Place the foods to be frozen in the drawer. At the start of the freezing process, so as not to make the fridge compartment excessively cold, it may be necessary to turn the thermostat knob back, according to the load and room temperature. Once the freezing process is completed, return the thermostat knob to the usual value. The rating plate states the maximum quantity of foods that can be frozen, (see figure 2).

DEFROSTING OF THE FREEZER COMPARTMENT

(figure 2)

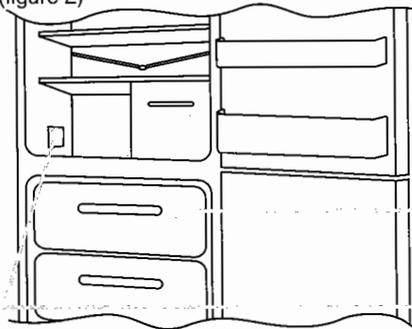

In case of a fridge with FROST FREE technology, the freezer compartment does not need to be defrosted because this product is equipped with an automatic system which prevents ice from forming;

In case of a version without FROST FREE technology, it is recommended to manually defrost the product when the layer of frost is more than 3 mm thick, by setting the knob on "0". Open the door and remove the foodstuffs, making sure to store them in a cool place. Leave the door open as long as is necessary for the layer of frost to melt. Dry the inside of the freezer with a sponge/cloth. Reposition the foodstuffs and reset the knob to the usual values.

N.B.: This is the rating plate. If you need to contact our Service Department in the event of faults, remember to give them the information on the plate.


N.B.: For better air circulation, leave some room between the foodstuffs. In case of models with FROST FREE technology, avoid obstructing the cooling air vents.

N.B.: To TEST consumption and preservation standards, remove all drawers except for the bottom one.


REVERSING THE OPENING OF THE DOORS

Place the appliance on the floor or at a 45° angle, since it is necessary to work on the bottom of the appliance.


Remove the bottom hinge by loosening the screws, then remove the lower door.

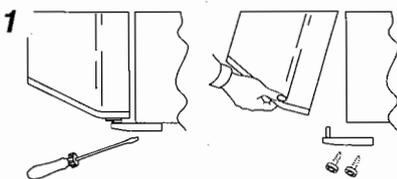


Remove the middle hinge by loosening the screws, then remove the top door.

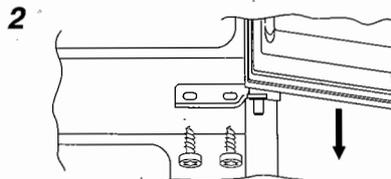


Remove the bushes on the right-hand side of the doors and mount them back on the left-hand side.

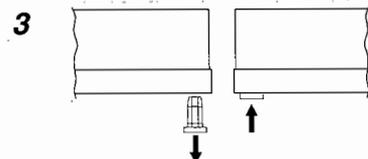


Remove the top hinge by loosening the screws. Unscrew the pin from the hinge.

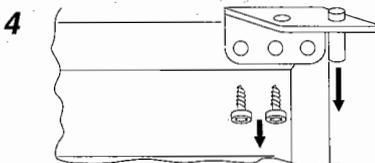


Disassemble and move the corner guide from left to the right-hand side, turning it 180°.

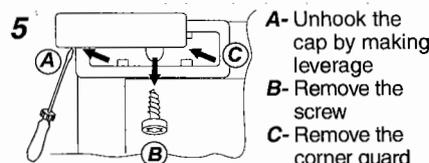

Remount the hinges and doors working from bottom to top, 1 - 2 - 3. Also remount the spacer washers between door and hinge.

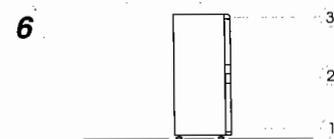


While fixing the top hinge on the left-hand side, tighten the screws and screw the pin back on in the left hole.

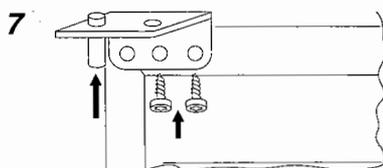

In order to reverse the vertical handles, if any, remove the outer caps from the right-hand side of the doors.



Unscrew the handles from the left-hand side and move them to the right-hand side, then position the outer caps removed previously from the right-hand side to the left-hand side.

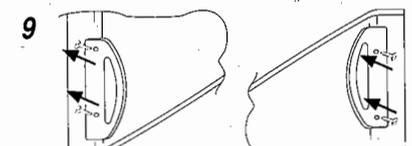

Put the appliance back in an upright position and wait two hours before turning it on.

N.B. For the doors to be correctly aligned, it is necessary to operate on the middle hinge.

MAINTENANCE

Proper maintenance will ensure a long life for your appliance. Remember to remove the plug before you clean/defrost the fridge, change the fridge light bulb, etc.

Cleaning

Clean the outside of the fridge at regular intervals with a damp cloth. Use a solution of bicarbonate of soda and water to clean the inside. Do not use abrasive products.

An outlet for draining water is located in the middle of the back of the fridge. Make sure this outlet is not obstructed; clean regularly.

Defrosting

In products without NO FROST technology, it is recommended to defrost the fridge every time a thick layer of frost is formed. To speed up the defrosting process, leave the doors open with the appliance turned off; to remove ice from the internal parts, avoid using sharp or mechanical objects (knives, scissors or any methods other than those recommended by the manufacturer) so as to prevent damaging the refrigerating circuit.


NOTE: a small amount of ice on the back of the fridge compartment is normal.

Replacing the fridge light bulb


To replace the light bulb in the fridge compartment:

Adjust the thermostat to „0“ and remove the plug from the socket.


Use a flat screwdriver to lift up the grid and remove the see-through cover.

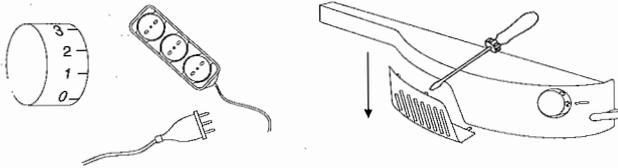

 
Remove the light bulb and replace with the same type and same watt bulb.



Re-fit the cover and plug in the appliance.

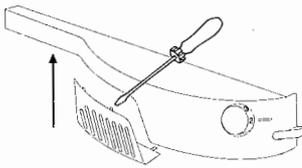


In case the fridge is equipped with an overhead light as shown below (figure A or figure B), take the above steps in order to replace the light bulb: using a screwdriver, remove the protective transparent cover, widening the wings. Replace the light bulb, reposition the protective cover and power up the appliance.

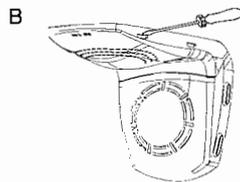

In products with TOTAL NO FROST technology, a column containing LED's may be found at the bottom of the fridge compartment, present only in electric type products and not mechanical products. Contact the support centre if the LED's should become faulty or fail to operate correctly.

STORING AND FREEZING FOODS

To make sure foods retain their flavour and substance and stay fresh, store them in the fridge compartment as shown in the figure below. Wrap foods in tin foil or cling film or put them in closed containers.

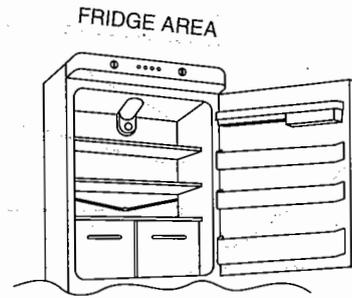

FREEZER COMPARTMENT:

Frozen foods can be stored for approximately one month in compartments ******.

See the table for storing foods in **** **** compartments.

Foods can only be frozen in **** ** *** compartments.

2 - 3 MONTHS			
4 - 6 MONTHS			
6 - 8 MONTHS			
10 - 12 MONTHS			

Trouble-shooting

Please contact our service department if you have any difficulties. However you can often solve small or apparently alarming problems yourself. In fact problems may be caused by incorrect use or installation or by unsuitable ambient conditions and in these cases you will be charged.

THE FRIDGE DOES NOT WORK

- Make sure the plug is inserted properly in the socket.
- Make sure the thermostat is not set to „0“ or Stop.
- Make sure the electricity is working.

THE FRIDGE IS NOT COLD ENOUGH

- Make sure the thermostat is set properly. Adjust to higher settings.
- Make sure the fridge doors have not been left open for too long.
- Make sure you haven't stored too much food in the fridge.
- Make sure you haven't put hot foods in the fridge.

THERE IS TOO MUCH FROST

- Make sure the door has not been left open for too long. Unplug the fridge, defrost and then turn it back on.
- Make sure the thermostat is not set at a temperature which is too cold (high settings). Adjust to lower settings.

THERE IS TOO MUCH CONDENSATION

- Make sure the door has not been left open for too long.
- Make sure you haven't stored too many fresh foods in the fridge.
- Make sure you haven't put hot foods in the fridge.

THERE IS WATER IN THE FRIDGE COMPARTMENT

- A few drops of water on the sides of the fridge compartment is normal, particularly when a room is humid/damp.
- Make sure the water outlet is not obstructed.

THE LIGHT DOES NOT WORK

- Make sure the plug is inserted in the socket properly.
- Make sure the electricity is working.
- To remove the light bulb, follow the instructions contained in the product's technical sheet or in this guide.

If the problem continues, contact our service department, giving the appliance number and serial number on the rating plate.