


# INSTRUCTION BOOK

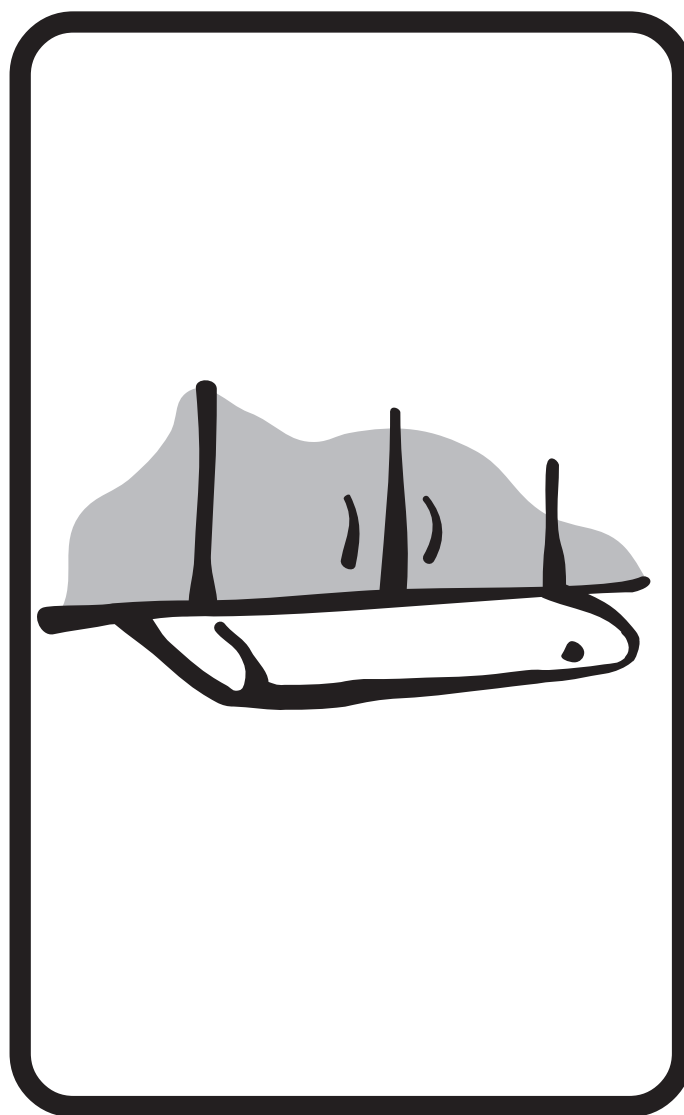

COOKER HOOD  
**MCH 660**

Thank you for buying an Moffat product.

To enable you to use your appliance effectively and safely, please read this instruction book carefully before using the appliance and retain for future reference. If you require guidance in the use of the appliance or require further information on Moffat Products, please contact our Customer Care Department. For general enquiries concerning your Moffat appliance or for further information, visit our website at <http://www.electrolux.co.uk>

Customer Care Department  
Moffat  
55 - 77 High Street  
Slough  
Berkshire  
SL1 1DZ

Tel: 08705 950 950

**To register ownership, please ensure you complete and return the guarantee card supplied with the appliance.**

## **For the User**

### **Important Safety Information**

### **Your Appliance**

#### **Operating Instructions**

The Controls  
To Operate  
Extraction  
Recirculation

#### **Maintenance and Cleaning**

External Cleaning  
Synthetic Paper Grease Filter  
To Replace the Synthetic Paper Grease Filter  
Charcoal Filter (Optional Extra)  
To Remove/Replace the Charcoal Filter  
Changing the Light Bulb

### **Something Not Working**

### **Service and Spare Parts**

### **Guarantee Conditions**

## **For the Installer**

### **Installation Instructions**

Technical Information

#### **Electrical Connections**

Electrical Requirements  
Electrical Connection

#### **Installing the Cooker Hood**

Installation Requirements  
Ducting  
Clearance Height  
Unpacking  
Wall Fitting  
Venting  
To Fit the Ducting  
Recirculation  
Fitting the Cooker Hood to the Wall

### **Service Force Centres**

## **Guide to use the instruction book**

The following Symbols will be found in the text to guide you through the instruction book



## IMPORTANT SAFETY INFORMATION

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using this appliance. Your safety is of paramount importance. If you are unsure about any of the meanings of these warnings contact the Customer Care Department.

### ■ Installation

- Any installation work must be undertaken by a qualified electrician or a competent person.
- This hood must be installed in accordance with the installation instructions and all measurements must be adhered to.
- If the cooker hood is installed for use above a gas appliance then the provision for ventilation must be in accordance with the Gas Safety Codes of Practice BS.6172, BS.5440 and BS.6891 (Natural Gas) and BS.5482 (LP Gas) 1994, the Gas Safety (Installation & Use) Regulations, the Building Regulations issued by the Department of the Environment, the Building standards (Scotland) (Consolidated) Regulations issued by the Scottish Development Department.
- The fan motor of this cooker hood incorporates a cut-out device which will operate if the cooker hood is installed below the minimum height recommended under section 'Clearance Height', or if the motor becomes overheated. If the cut-out device is activated, switch off the fan motor and allow the cooker hood to cool. The cut-out device will reset itself when the fan motor has cooled significantly.
- It is dangerous to alter the specifications or modify this product in any way.
- When installed between adjoining wall cabinets the wall cabinets must not overhang the hob.
- If the room where the hood is to be used contains a fuel burning appliance such as a central heating boiler then its flue must be of the room sealed or balanced flue type.
- If other types of flue or appliances are fitted ensure that there is an adequate supply of air to the room.
- The ducting system for this appliance must not be connected to any existing ventilation system which is being used for any other purpose.

- Do not install above a cooker with a high level grill.

### ■ Child Safety

- This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance.


### ■ During Use

- This product is for domestic use only.
- Never leave frying pans unattended during use as over-heated fats and oils might catch fire.
- Never do flambé cooking under this cooker hood.
- Do not leave naked flames under the hood.

### ■ Maintenance and Service

- This appliance can be a hazard if the synthetic paper and charcoal filters are not replaced as recommended.
- Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or more serious malfunction. Refer to your local Service Force Centre. Always insist on genuine spare parts.

## YOUR APPLIANCE

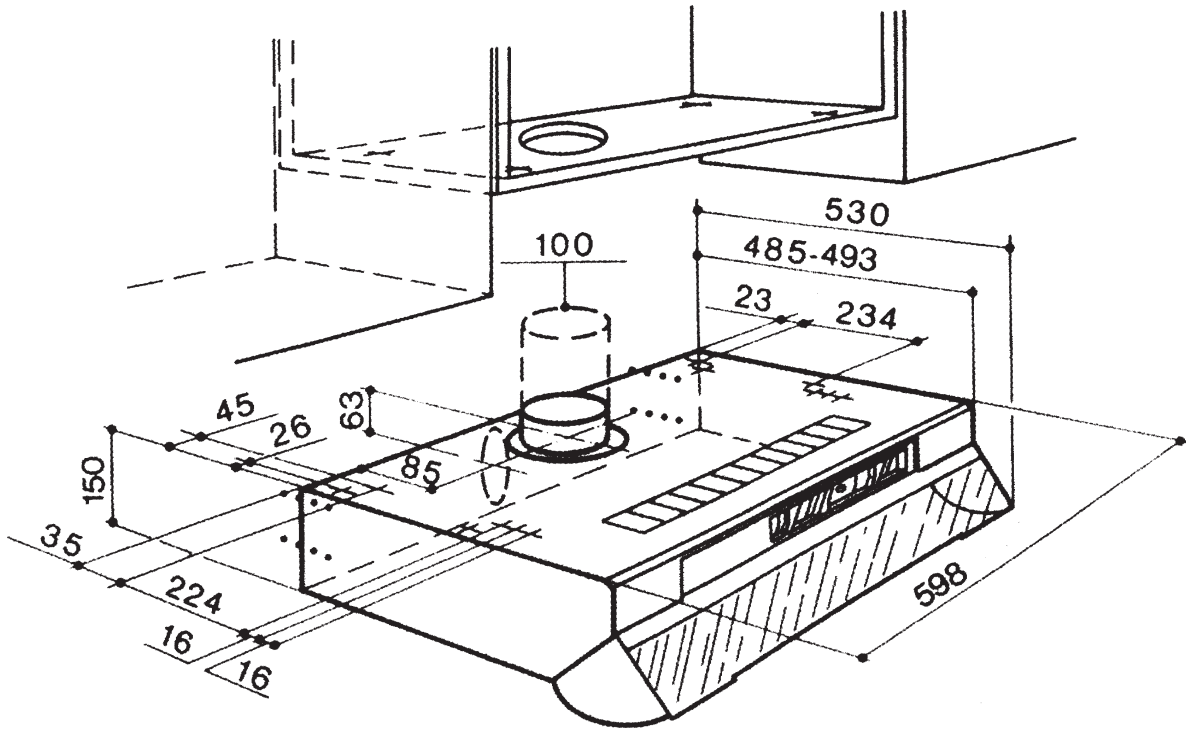

## OPERATING INSTRUCTIONS

**This cooker hood is designed to extract unpleasant odours from the kitchen, it will not extract steam.**

To obtain the best performance it is advisable to switch on the hood a few minutes before you start cooking and leave it running for approximately 15 minutes after finishing.

The cooker hood controls are located on the right hand side, in the front fascia panel.

### The Controls

Fan ON/OFF/Speed Control

- Position 0 - Off
- Position 1 - Low
- Position 2 - Normal
- Position 3 - Boost

Light ON/OFF control

- 0 - Off
- 1 - On

### To Operate

Select the required fan speed and light if required.

The appliance can be installed to recirculate or extract contaminated air. The cooker hood is more effective when used in the extraction mode.

## **Recirculation**

The cooker hood is supplied specified for use in the recirculation mode with the charcoal filter fitted.

In the recirculation mode contaminated air is passed through the charcoal filter to be purified and recirculated into the kitchen through a recirculation grille.

## **Extraction**

In the extraction mode contaminated air enters the cooker hood, passes through the grease filter and out through the ducting into the atmosphere.



*When the ducting position is selected the charcoal filter is not required.*

*Never do flambé cooking under this cooker hood.*

*Take extra care when frying and never leave frying pans unattended during use as over-heated fats and oils might catch fire.*

*Do not leave naked flames under the cooker hood.*

*Ensure heating areas on your hob are covered with pots and pans when using the hob and cooker hood simultaneously.*

## MAINTENANCE AND CLEANING



Before carrying out any maintenance or cleaning isolate the cooker hood from the mains supply.

The cooker hood must be kept clean, a build up of grease or fat can be a fire hazard.

### External Cleaning

Wipe the cooker hood frequently with warm soapy water using a mild detergent.



Always wear protective gloves when cleaning the hood.

Never use scouring pads or abrasive cleaners.

Never use excessive amounts of water when cleaning particularly around the control panel.

### Synthetic Paper Grease Filter



The synthetic paper grease filter cannot be cleaned.


**It must not be washed.**



### To Replace the Synthetic Paper Grease Filter

1. Open the glass visor.
2. Press inwardly on the two slide catches and the grille will open from the front.
3. Slide the right edge of the grille forward until it clears the guide and then unhook the left hinge pin.
4. Carefully ease out the metal wire retaining clips as illustrated opposite.
5. Clean the metal grille and clips before replacing the filter.

Handle the wire clips with care and keep away from children as they have sharp points.

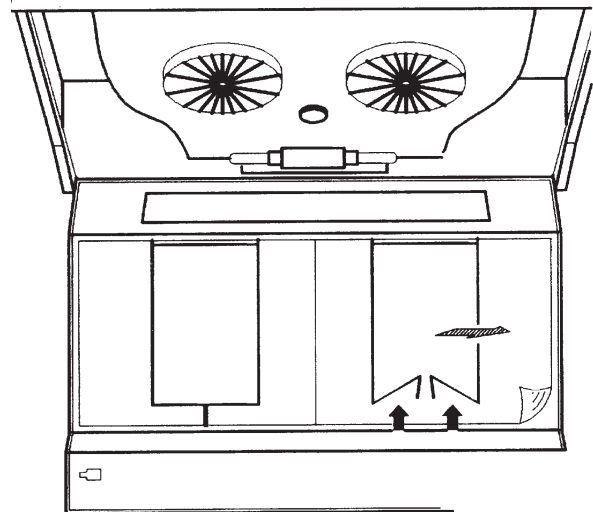


## Charcoal Filter

The charcoal filter cannot be cleaned.

The filter should be replaced at least every three months or more frequently if the hood is used more than three hours per day.

### To Remove/Replace the Charcoal Filter

1. Remove the metal inlet grille.
2. Carefully turn the disk (C) anti-clockwise and remove the the charcoal filter (B) from the motor support (A) as illustrated opposite.
3. Clean the metal inlet grille and motor support before replacing the charcoal filter.
4. Place the new charcoal filter (B) over the motor support (A), and while holding the filter securely insert the disk (C) and turn clockwise.

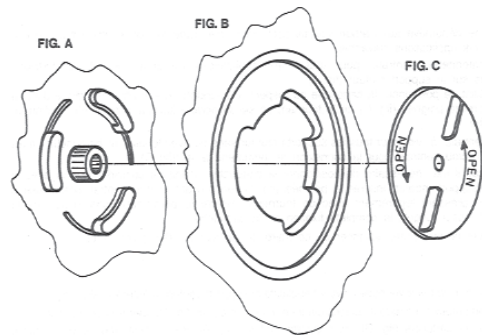

## Changing the Light Bulb

If the light bulb fails to function check that the bulb is screwed into the holder.

If bulb failure has occurred then it should be replaced with a 220-240V 40W clear cylindrical shape bulb with a small E14 screw thread.

**Charcoal filters, grease filters and light bulbs can be obtained from your local Service Force Centre**



*This appliance can be a fire hazard if the grease and charcoal filters are not replaced as recommended.*

## SOMETHING NOT WORKING

If, having followed these instructions carefully, your cooker hood fails to work properly please carry out the following checks.

Symptom	Solution
<b>The cooker hood will not start</b>	<ul style="list-style-type: none"><li>• Check the hood is connected to the electricity supply.</li><li>• Make sure the switch is in the 'ON' position.</li></ul>
<b>The cooker hood is not working effectively</b>	<ul style="list-style-type: none"><li>• The fan speed is set high enough for the task</li><li>• The grease filter is clean.</li><li>• The kitchen is adequately vented to allow the entry of fresh air.</li><li>• If set up for recirculation, check that the charcoal filter is still effective.</li><li>• If set up for extraction, check that the ducting and outlets are not blocked.</li></ul>
<b>The cooker hood has switched off during operation</b>	<ul style="list-style-type: none"><li>• The safety cut-out device has been tripped.</li><li>• Turn off the hob and then wait for the device to reset.</li></ul>

If after all these checks, the fault persists, contact your local Service Force Centre, quoting the model and serial number.

Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls.

**In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.**

## SERVICE AND SPARE PARTS

If you require an engineer or spare parts contact your local Service Force Centre by telephoning:

**08705 929929**

Your telephone call will be routed to your local Service Force Centre. The addresses are listed in the back of the book.

Moffat has an agreement with Electrolux who will undertake all servicing requirements for your appliance.

For general assistance with your appliance or for further information on Moffat products please contact our Customer Care Department.

Customer Care Department,  
Moffat  
55 - 77 High Street  
Slough  
Berkshire  
SL1 1DZ

Tel: 08705 950 950\*

\* calls to this number may be recorded for training purposes.



## GUARANTEE CONDITIONS

We, Moffat, undertake that if within twelve months of the date of the purchase this Moffat built-in appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, the company will, at our option repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electrical supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by an Electrolux Service Force Centre.
- Any appliance or defective part replaced shall become the property of this company.

Home visits are made between **8.30am and 5.30pm Monday to Friday**. Visits may be available outside these hours in which case a premium will be charged.

### EXCLUSIONS

**This Guarantee does not cover:**

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right appliances improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are the subject of rental agreements.
- Products of Moffat manufacture which are not marked by Moffat.

This guarantee is in addition to your statutory and legal rights.

### ELECTROLUX EUROPEAN GUARANTEE

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.

**Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.**

France	Senlis	+33 (0)3 44 62 22 22
Germany	Nurnberg	+49 (0)911 323 2600
Italy	Pordenone	+39 (0)1678 47053
Sweden	Stockholm	+46 (0)20 78 77 50
UK	Slough	+44 (0)1753 219 898

# INSTALLATION INSTRUCTIONS



*It is dangerous to alter the specifications or attempt to modify this product in any way.*

## Technical Information

<b>DIMENSIONS</b>	HEIGHT:	150mm
	WIDTH:	598mm
	DEPTH:	498mm
	DEPTH WITH VISOR OPEN:	510mm
<b>WEIGHT</b>	GROSS:	8,5 kg
	NET:	7,4 kg
<b>ELECTRICAL SUPPLY:</b>	Voltage (50Hz)	220-240 V
<b>POWER CONSUMPTION:</b>		115W
<b>FAN MOTOR:</b>		75W
<b>LAMP:</b>		40W
<b>SUITABLE FOR INSTALLATION ABOVE:</b>	ELECTRIC HOB:	7KW (max)
	GAS HOB:	10KW (max)
	SLOT-IN GAS COOKER	13.5KW (max)
	SLOT-IN ELECTRIC COOKER	12.4KW (max)



**Note: CE Marking certifies that this appliance complies with the requirements laid down in EEC directive 89:336. (Electromagnetic compatibility) and subsequent modifications and Low Voltage directive 72/23/E.**

# ELECTRICAL CONNECTIONS



**WARNING: DOUBLE INSULATED-DO NOT EARTH**

## Electrical Requirements

Any permanent electrical installation must comply with the latest I.E.E. Regulations and local Electricity Board regulations. For your own safety this should be undertaken by a qualified electrician e.g. your local Electricity Board, or a contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC).

## Electrical Connection

Before connecting to the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the cooker hood.

This appliance is fitted with a 2 core mains cable and must be permanently connected to the electricity supply via a double-pole switch having 3mm minimum contact gap on each pole. A Switched Fuse Connection Unit to BS.1363 Part 4, fitted with a 3 A fuse is a recommended mains supply connection accessory to ensure compliance with the Safety Requirements applicable to fixed wiring instructions.

This appliance conforms to BS.800: 1988 and EEC Directive No. 78 308 regarding suppression of radio and television interference.

# INSTALLING THE COOKER HOOD

**Please ensure that when the appliance is installed it is easily accessible to an engineer in the event of a breakdown.**



*All installations must comply with the local authorities requirements for the discharge of exhaust air.*

*Incorrect installation may affect the safety of this cooker hood.*

## Installation Requirements



*Before installation check the wall to which the cooker hood is to be fitted for electric cables, water or gas pipes.*

If it is necessary to fix the hood to a hollow construction plaster or partition board structure then it should be sufficiently reinforced to be quite rigid in the area of the cooker hood keyhole fixing screws, and the appropriate rawl plugs used for this type of fixing (not supplied).

## Ducting

The ducting must be fire retardant 100mm (4ins) in diameter and the length should be no more than:

3 metres with one 90° bend

2 metres with two 90° bends

Bends of more than 90° will reduce the efficiency of the hood and reduce the airflow.

## Clearance Height

The cooker hood is designed to be fitted over a cooking appliance at the clearance heights stated, providing the maximum output of the appliance beneath does not exceed the maximums quoted in the Technical Specifications.

If the output of the appliance below the cooker hood exceeds the maximum output quoted, please refer to the cooker hood manufacturer's installation instructions.

## Clearance Height

A clearance height of 650mm (25 1/2 ") is required when installed above a built-in electric hob, or 700mm (27 1/2 ") when installed above a built-in gas hob.

A clearance height of 685mm (27") is required when installed above a slot-in electric oven, or 787mm (30 1/2 ") when installed above a slot-in gas oven.

When installed between adjoining wall cabinets, the wall cabinets must not overhang the hob and the distance between the underside of the cabinet and the worktop must be 450mm. If the height of the wall cabinet is less than 450mm a gap of 50mm must be maintained either side of the hob.



*This cooker hood must not be installed above a cooking appliance with a high level grill.*

## Unpacking


The fittings supplied to install this cooker hood can be found with the instruction book inside the packaging and consists of the following:

Wall/suspended fixing template  
Plastic rawl plugs (2)  
Fixing screws (4)


## Wall Fitting

The cooker hood is fitted to the wall using the keyhole slots in the back of the hood.

1. Mark the position on the wall for the two  $\text{Ø } 8\text{mm}$  dia screw holes (A) as illustrated in the drawing opposite at 568mm.
2. Check that the hole distances are correct and are level using a spirit level.
3. At this stage it is important to allow 25mm (1") clear space above the cooker hood to enable it to be hooked onto the screws and for subsequent removal for decorating or servicing.
4. Insert the screws and tighten to a distance of 5mm.

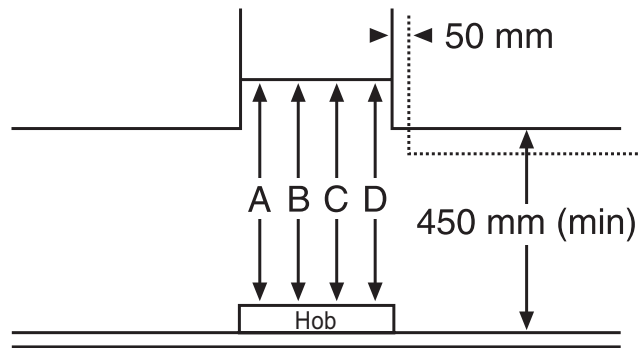


A: Built-in Electric Hob:	650mm clearance
B: Built-in Gas hob:	700mm clearance
C: Slot-in Electric Cooker:	685mm clearance
D: Slot-in Gas Cooker:	787mm clearance

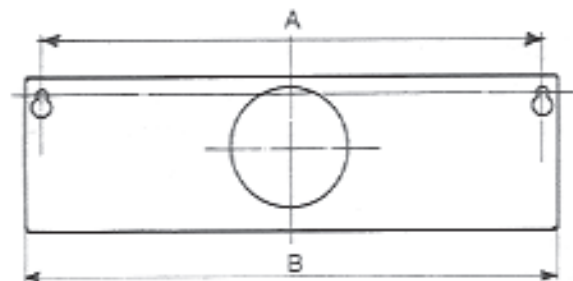

## Venting


The hood is more effective when used in the extraction setting (ducted to the outside). Venting kits may be purchased through your retailer or DIY store, and must be ducted to an outside vent of 100mm (4") minimum.

 *The ducting used must be manufactured from fire retardant material which should conform to the relevant British Standard or DIN4102-B1.*

When the hood is ducted externally the charcoal filter must be removed and the slider control must be in the ducting position.

### To Fit the Ducting

1. Fit the ducting spigot and blanking plate, by aligning the interlocking lugs on the fittings, with the recesses in the aperture as illustrated in (A) and (B) opposite.
2. Insert and turn anti-clockwise to lock the spigot and blanking plate into position.

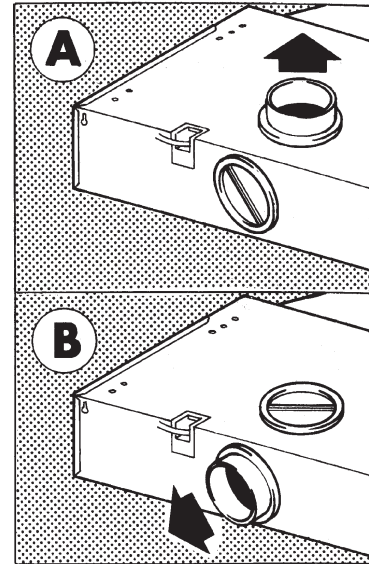


## Recirculation

The charcoal filter must be fitted for recirculation and the slider control must be in the recirculation position.

### Fitting the Cooker Hood to the Wall

1. Remove the grille by pressing inwardly on the two slide catches.
2. Hinge the grille forward to free it from the guides in the side of the casing. The two keyhole slots are now visible.
3. Hook the hood onto the screws using the keyhole slots.
4. Tighten the screws to secure the hood to the wall. **Ensure the cooker hood is correctly located before letting go.**
5. Refit the grille onto the cooker hood
  - insert the left hand hinge pin into the hole in the left hand side of the casing.
  - slide the right hand hinge pin into the guide over the stop position.
  - close the grille and secure using the two slide catch bolts.

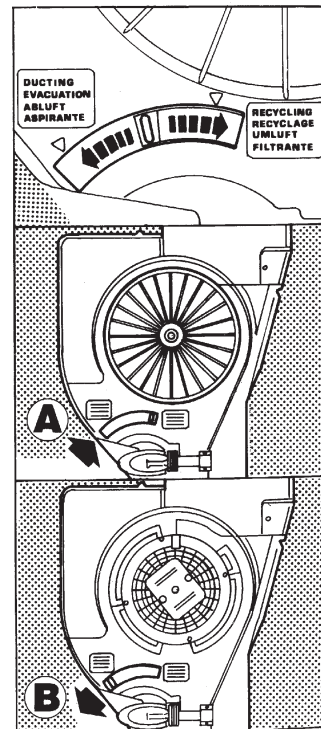

# Service and Spare Parts

## **SERVICE FORCE**

In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning:

**0870 5 929929**

Your telephone call will be automatically routed to the Service Force Centre covering your post code area.

Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working."

When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and post code
2. Your telephone number
3. Clear and concise details of the fault
4. The model and serial number of the appliance (found on the rating plate)
5. The purchase date

# Customer Care Department

For general enquiries concerning your Moffat appliance or for further information on Moffat products, please contact our Customer Care Department by letter or telephone at the address below

## **Customer Care Department**

**MOFFAT**  
55-77 High Street  
Slough  
Berkshire  
SL1 1DZ  
Tel. 08705 950950 (\*)

\* calls to this number may be recorded for training purposes.

# Guarantee Conditions

Please refer to your guarantee card for the guarantee conditions. Replacement cards are available on request from the above address.



Moffat

55 - 77 High Street - Slough  
BERKSHIRE SL1 1DZ  
© Electrolux plc 2002