





**ACCESSORIES**

Wire shelf - Baking tray - Grill Pan Set

Oven function chart	
Function	Description of function
0 <b>OVEN OFF</b>	-
 <b>LAMP</b>	<ul style="list-style-type: none"> <li>To switch on the oven light.</li> </ul>
 <b>DEFROSTING</b>	<ul style="list-style-type: none"> <li>Ideal for thawing frozen food at room temperature.</li> <li>The food should be placed in the oven in its wrapping to prevent it from drying out.</li> </ul>
 <b>FAN/ THERMOVENTILATED</b>	<ul style="list-style-type: none"> <li>To cook (without preheating) foods that require the same cooking temperature on one or more levels (e.g.: fish, vegetables, sweets), without transferring odours from one foodstuff to the other</li> </ul>
 <b>GRILL</b>	<ul style="list-style-type: none"> <li>To grill steak, kebabs and sausages, to cook vegetables au gratin and to toast bread.</li> <li>Preheat the oven for 3 - 5 min.</li> <li>The oven door must be kept open during the cooking cycle.</li> <li>When cooking meat, pour a little water into the drip tray (on the bottom level) to reduce smoke and fat spatters.</li> <li>Ideally the meat should be turned during cooking.</li> </ul>



















**SWITCHING ON THE OVEN**

Turn the selector knob to the required function. The oven light switches on.

Turn the thermostat knob clockwise to the required temperature. The red thermostat led lights up, switching off again when the oven reaches the selected temperature. At the end of cooking, turn the knobs to "0".

**MINUTE MINDER**

The minute minder allows a time of between 1 and 60 minutes to be set. To set the minute minder, first turn it clockwise all the way round and then set it to the desired time. Once the set time has elapsed, a signal sound will be emitted.

FOOD	Function	Level (from the bottom)	Temperature (°C)	Cooking time min.
Lamb/Veal/Beef/Pork		2	190-210	90-110
Chicken/Rabbit/Duck		2	190-200	65-85
Turkey/Goose		2	190-200	140-180
Fish		2	180-200	50-60
Stuffed peppers and tomatoes/roast potatoes		2	180-200	50-60
Leavened cakes		2	170-180	45-55
Filled pies		2	180-200	60-90
Biscuits		2	170-180	35-45
Lasagna		2	190-200	45-55
Pizza/Bread		2	200-225	40-50/15-18
Whole chicken		2	190-200	55-65
Roast beef		2	200-225	35-45
Roast meats		2	190-210	60-70
Fish (whole)		2	180-200	50-60
Toast		3/4	250	1.5-2.5
Cutlets/Sausages/Kebabs		3/4	250	35-45
Vegetables au gratin		3	250	5-8
1/2 chicken		3	250	40-50

**Note:** Cooking times and temperatures are based on using food quantities for about 4 servings.

15 Welby Street.

ELECTRIC OVEN

Model no - : LPR 9022

Serial no - : 3909400 14884

Gebrauchsanweisung

Instructions for use

Mode d'emploi

Gebruiksaanwijzing

Instrucciones para el uso

Manual de utilização

Istruzioni per l'uso

Οδηγίες χρήσης

Bruksanvisning

Käyttöohje

Brugsanvisning

Instrukcje użytkowania

Návod k použití

Návod na použitie

Használati utasítás

Инструкция за използване

Instrucțiuni de utilizare

Инструкции по эксплуатации

# INSTRUCTIONS FOR USE

<b>INSTALLATION pro<b>fit</b> .....</b>	<b>4</b>
<b>SAFEGUARDING THE ENVIRONMENT .....</b>	<b>7</b>
<b>IMPORTANT NOTES.....</b>	<b>7</b>
<b>BEFORE USING THE OVEN.....</b>	<b>8</b>
<b>OVEN ACCESSORIES .....</b>	<b>9</b>
<b>CARE AND MAINTENANCE.....</b>	<b>10</b>
<b>TROUBLESHOOTING GUIDE .....</b>	<b>12</b>
<b>AFTER SALES SERVICE.....</b>	<b>12</b>

To make the most of your new oven, read the user's instructions carefully and keep them on hand for consultation in the future.

# INSTALLATION





## Recommendations

**IMPORTANT:** Disconnect the oven from the mains before carrying out any installation work or servicing.

- Installation must be carried out by a qualified technician in accordance with the manufacturer's instructions and in compliance with local regulations.
- Unpack the oven and make sure that the oven has not been damaged during transport and that the oven door closes properly. **If you are not sure contact the dealer or the nearest service centre.**
- After removing the oven from its packaging, leave it on the polystyrene base to prevent it from being damaged.
- When installing the oven it is advisable to wear protective gloves.
- The oven is provided with two side handles **profil (B)** to facilitate installation (fig. 7).

## Preparing the housing unit

- Kitchen units in contact with the oven must be heat resistant (80°C min).
- Cut the kitchen unit and worktop to fit before installing the oven. Carefully remove any shavings or sawdust that could prevent the oven from running properly.
- The dimensions of the housing units in which the oven can be installed are shown in figures 1, 2 and 3. The dimensions of the oven are shown in figure 4.
- To allow for proper ventilation, an opening should be left at the bottom of the housing unit. Pay attention to the dimensions. **The bottom of the oven must not be accessible after installation.**
- During installation make sure that the sides of the oven do not touch the adjacent units.

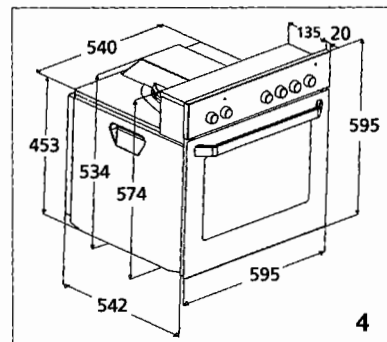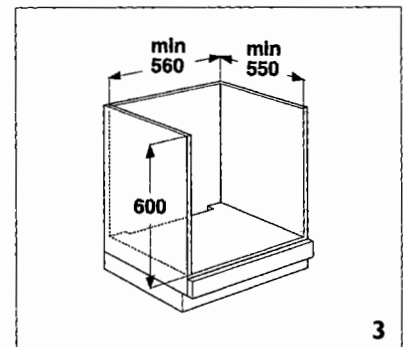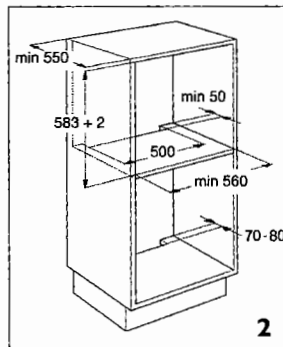
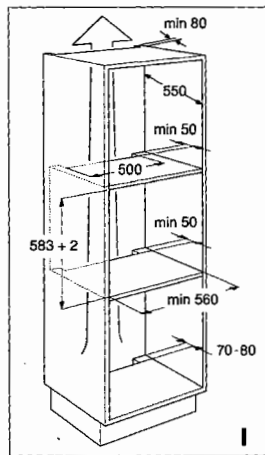


- For ovens installed under the worktop, leave a minimum clearance of 5 mm between the upper edge of the oven and the lower edge of the worktop (fig. 5). **For correct operation of the appliance, this clearance must always be unobstructed.**
- If the kitchen unit is not securely fixed to the wall, it must be anchored with standard brackets (A) (fig. 6).

### Electrical connection


#### Regulations require that the appliance be earthed.

- Connection to the mains must be carried out by a qualified electrician in accordance with the manufacturer's instructions and in compliance with local regulations.
- The installer is responsible for connecting appliances correctly to the mains and for observing the safety regulations.
- The oven power cable must be long enough to connect the built-in oven to the mains.
- Observance of safety directives requires that an accessible mains disconnection device or a multi-pole switch with a minimum contact gap of 3mm be used for the installation.
- Do not use multiple plug adapters or extension leads.
- After the oven has been installed, the electrical components must be inaccessible.

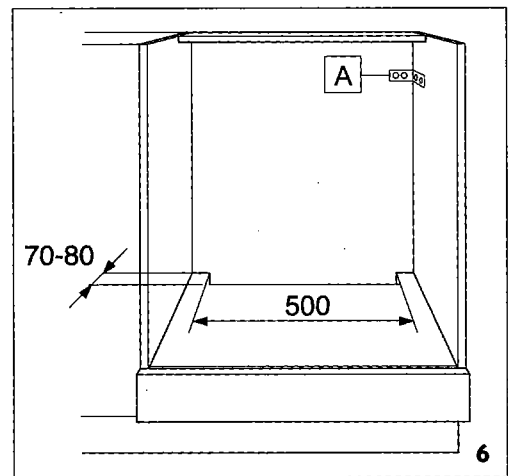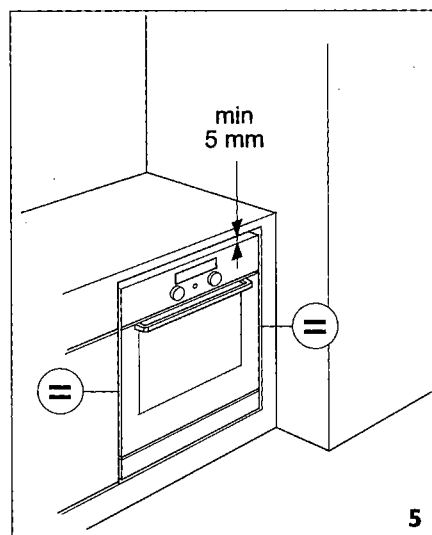

### Connecting the oven to the power supply




- Make sure that the voltage indicated on the rating plate is the same as the mains voltage. The rating plate is on the front edge of the oven (visible when the door is open).
- If the power cable is not present proceed as follows:
  1. Remove the two fastening screws of the terminal box cover located on the bottom part of the oven's rear covering.
  2. Remove the cover to gain access to the terminal box and insert the power cable (see table) through the opening located on the bottom of the oven.

Power supply cable table	
N° of conductors	Type of cable
1N+  ~	H05 RR-F 3 X 1.5 mm <sup>2</sup>

3. Connect the cable to the terminal box, tighten the screws as far as they will go and secure it to the cable fastener.
4. Put the cover back on by inserting the two blades in the slots and fasten it with the two screws.

### Securing the oven


- Lift up the oven getting hold of it by the handles (B) **profit** on the sides and insert it into the housing unit, being careful not to trap the power supply cable (fig. 8).
- Center the oven in the housing unit before securing it.
- The oven comes with spacers **profit** already fitted to facilitate the anchoring of the oven to the housing unit with the screws provided (as shown in fig. 9).

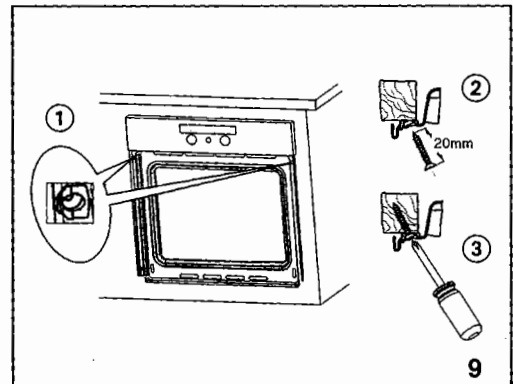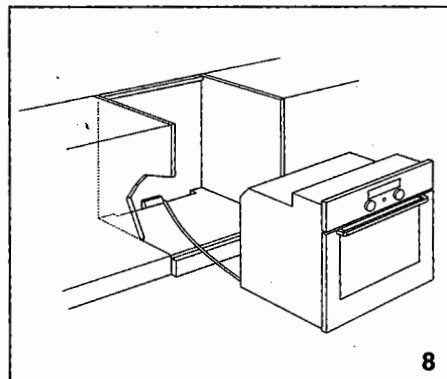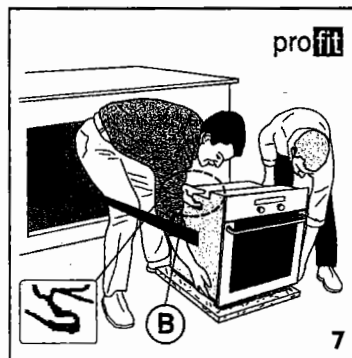

# SAFEGUARDING THE ENVIRONMENT


## Disposal of packaging materials

- The packaging material is 100% recyclable and is marked with the recycle symbol ♻.
- The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

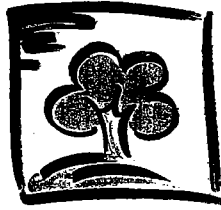

## Disposal of used household appliances

- This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## Energy saving

- Only pre-heat the oven if specified in the cooking table of the Product Description Sheet or in your recipe.
- Use dark, black enamelled baking moulds as they absorb heat very well.

# IMPORTANT NOTES

## Warning:

- Accessible parts will become hot when in use. To avoid burns and scalds children should be kept away.
- Not intended for use by young children and infirm persons without supervision.
- Young children should be supervised to ensure they not play with the appliance.
- This oven is designed solely for use as a home appliance for cooking food. No other type of use is allowed. The Manufacturer declines all responsibility for inappropriate use or incorrect setting of the controls.
- Any repairs or adjustments must be carried out exclusively by a qualified technician.
- Never expose the oven to atmospheric agents.
- Do not put heavy objects on the door because they could damage the oven cavity and hinges. Do not cling to the door.
- Never hang anything heavy on the oven door handle.
- Do not cover the bottom of the oven with aluminium foil or other objects.
- The oven door must close properly. The door seals must be kept clean.
- Do not pour water directly into the inside of a hot oven. The enamel coating could be damaged.
- Fruit juice drippings from the baking tray may leave permanent stains. We recommend the oven be cleaned before reusing it.
- Never drag pots and pans across the bottom of the oven to prevent the coating from being scratched.
- Residual condensation after cooking could damage the oven and surrounding kitchen units in time. We recommend that you:
  - set the lowest temperature;
  - cover food;
  - remove food from the oven;
  - dry the wet parts when the oven is cool.
- The front panel and the handle of the oven door warm up when the appliance is switched on for a long time at high temperatures.



- Never touch the oven with any wet part of the body and do not operate it with bare feet.
  - Do not pull the appliance or the power supply cable to disconnect them from the electrical supply.
  - **Do not allow children to touch:**
    - the oven and its controls, especially when in operation and immediately afterwards to avoid injury;
    - packaging (bags, polystyrene, metal parts, etc.);
    - an oven to be scrapped.
  - Make sure that the electrical cables of other appliances used near the oven do not touch hot parts and are not trapped in the oven door.
  - Some oven models are equipped with an air cooling system to prevent the front of the oven and cabinet cavity from reaching excessively high temperatures.
- Attention:** Steam and smoke are vented through an opening located between the control panel and the oven door. Do not obstruct the vent opening.
- Do not place inflammable material in the oven or nearby: a fire may break out if the oven is inadvertently switched on.
  - Use oven gloves to remove pans and accessories, when the oven is hot.
  - If alcoholic beverages are added when roasting or cooking cakes and sweets (e.g. rum, cognac, wine, etc.) remember that alcohol evaporates at high temperatures. It may happen that vapours released by the alcohol can catch fire when they are in contact with the electric heating element.
  - Do not heat or cook sealed jars or containers in the oven. The pressure that develops inside the packaging might cause it to explode, damaging the oven.
  - Do not use containers made of synthetic material for cooking (except for packages specifically designed for this purpose; see the manufacturer's instructions). They could melt at high temperatures.
  - Always keep a watch on pans when cooking with oil and grease. Oil and fat can overheat and catch fire!
  - Never pull out fully loaded shelves. Use extreme caution.

## BEFORE USING THE OVEN

- Remove the accessories from the oven and heat it 200°C for about an hour to eliminate the smell of the protective grease and insulating materials. Keep the window open during this operation.
- Before use, remove:
  - stickers on the front and oven door, except for the rating plate;
  - cardboard protection and protective plastic film from the front panel controls and other parts of the oven;
  - any sticky labels from the accessories (for example, under the drip tray).

# OVEN ACCESSORIES

The accessories not provided with the oven can be bought separately from After Sales Service. The accessories provided with the oven are listed in the Product Description Sheet provided separately (under Accessories).

## Drip tray (1)

The drip tray is designed to collect fat and food particles when it is positioned under the grid or as a plate, such as when cooking meat, chicken and fish with or without vegetables. Pour a little water into the drip tray to prevent splatters of fat and smoke.

## Baking tray (2)

For cooking biscuits, cakes and pizzas.

## Grid (3)

The grid can be used to grill food or as a support for baking trays, cake tins and other cooking receptacles. It can be placed on any of the runners in the oven. The grid can be inserted with its curved side facing upwards or downwards.






## Turnspit (4)

Use the turnspit as indicated in the relevant chapter in the Product Description Sheet supplied separately.

## Grill pan set (5)

The set comprises a grid (5a), an enamel drip tray (5b) and one or two handles (5c).

This set must be placed on the grid (3) and used with the Grill function.

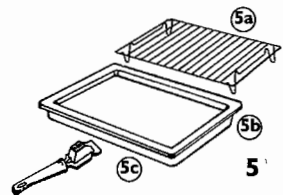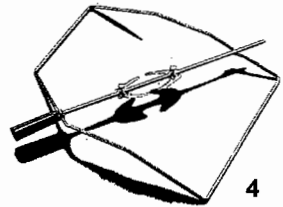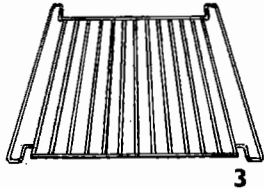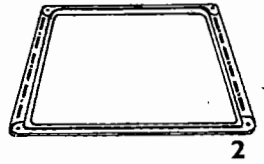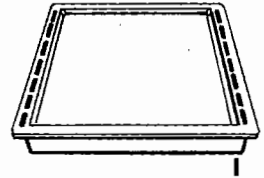

# CARE AND MAINTENANCE

**Important:** never clean the appliance with high pressure water or steam cleaning equipment.

## Exterior of the oven

- Clean with a damp cloth. If it is very dirty, add a few drops of washing up detergent to the water. Wipe with a dry cloth.
- Do not use corrosive or abrasive detergents, which dull the surface.  
In the event that one of these products comes into contact with the oven, immediately clean it using a damp cloth.
- Slight differences in colour on the front of the appliance are determined by the different materials used, such as glass, plastic and metal.

## Ovens with aluminium front panel

- Clean using a delicate detergent and a soft window cleaning cloth or a microfibre cloth that does not leave fibres on the surface. Wipe horizontally, without exerting pressure.
- Do not use corrosive products, hard sponges or rough cloths. Clean the aluminium surfaces with a dry cloth.


## Accessories

- Soak the accessories in water with washing up detergent immediately after use. Food residues can be easily removed using a brush or sponge.

**Attention:** When carrying out the following operations it is advisable to wear protective gloves. These instructions should be carefully followed both to prevent injury and in order not to damage the oven door and hinges.


**How to remove the oven door:**

1. Open the oven door fully (see fig. 1).
2. Lift the two catches and push them forwards as far as they go (see fig. 2).

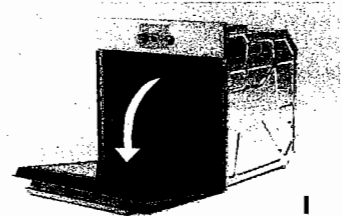

3. Remove the door by closing it partially and pulling it upwards (see fig. 3).


Pay attention to the hinges when cleaning and/or removing the door (fig. 4).

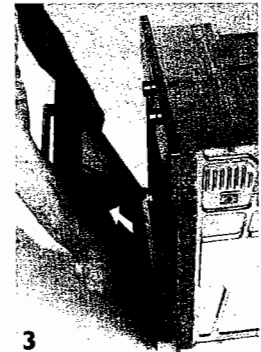

**To remount the door:**

1. Insert the hinges into their grooves and lower the door fully.
2. Lower the two catches.
3. Close the oven door fully.

**Attention:** These instructions should be carefully followed both to prevent injury and in order not to damage the oven door and hinges.

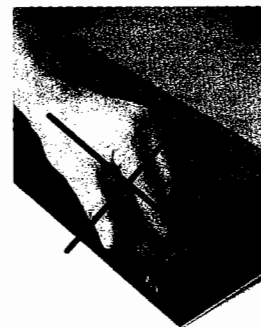

**Changing the rear oven lamp bulb:**

1. Disconnect the oven from the electrical supply.
2. Let the oven cool before turning the lamp cover left to unscrew it (see fig. 5).
3. Change the bulb (see note).
4. Screw the lamp cover back on.
5. Reconnect the oven to the electrical supply.

**Note:** use only 25 W/230 V, E-14 type, T300°C bulbs available from After Sales Service.

**IMPORTANT:** Do not use the oven until the lamp cover has been repositioned.



# TROUBLESHOOTING GUIDE

## Oven not working:

- Check for the presence of mains electrical power and if the oven is connected to the electrical supply.
- Turn off the oven and restart it to see if the fault persists.

## IMPORTANT:

- Check that the oven control knob is not turned to "0" or to "lamp" .

If the electronic programmer (depending on model) display presents the message "STOP", consult the product description sheet provided separately and/or the electronic programmer description.

- If the electronic programmer (depending on the model) presents the message "F HH", contact the nearest After Sales Service. Specify in this case the number that follows the letter "F".

# AFTER SALES SERVICE

## Before you call the After Sales Service:

1. Try to solve the problem yourself following the points described in "Troubleshooting Guide".
2. Turn the appliance off and on again, to make sure that the problem has been solved.

**If after the above checks the fault still occurs, get in touch with the nearest After Sales Service.**

Please give:

- a brief description of the fault;
- the type and exact model of the oven;
- the service number (number after the word Service on the rating plate), located on the right hand edge of the oven cavity (visible when the oven door is open). The service number is also indicated on the guarantee booklet;
- your full address;
- your telephone number.

**SERVICE** 0000 000 00000



If any repairs are required, please contact an **authorised After Sales Service** (to guarantee that original spare parts will be used and repairs carried out correctly).

**Failure to comply with these instructions may compromise the safety and quality of the product.**

## DECLARATION OF CONFORMITY

- **This oven is intended to come into contact with foodstuffs and conforms to Directive 89/109/EEC.**
- **This appliance is designed to be used for cooking only. Any other use (e.g. for room heating) is considered as improper use and potentially dangerous.**
- **This appliance has been designed, constructed and marketed in compliance with:**
  - The safety requirements of "Low Voltage" Directive 73/23/EEC;
  - the protection requirements of EMC Directive 89/336/EEC;
  - the requirements of Directive 93/68/EEC.

Printed in Poland  
**beta-druk**  
5/2006

**5019 610 55010/B**

